

# W50B


<a href="#">1. Safety and Precautions.....</a>	<a href="#">6</a>
<a href="#">2. Your Phone.....</a>	<a href="#">10</a>
<a href="#">2.1 Keys and Parts.....</a>	<a href="#">10</a>
<a href="#">2.2 Screen Icons.....</a>	<a href="#">11</a>
<a href="#">3. Get started.....</a>	<a href="#">11</a>
<a href="#">3.1 Install SIM Card and Battery.....</a>	<a href="#">11</a>
<a href="#">3.2 Charging.....</a>	<a href="#">12</a>
<a href="#">3.3 Power on/off.....</a>	<a href="#">12</a>
<a href="#">3.4 Use Headset.....</a>	<a href="#">12</a>
<a href="#">4. Menu Tree.....</a>	<a href="#">12</a>
<a href="#">5. Basic Function.....</a>	<a href="#">12</a>
<a href="#">5.1 Add New Entry.....</a>	<a href="#">12</a>
<a href="#">5.2 Make a call.....</a>	<a href="#">13</a>
<a href="#">5.3 Answer or Reject A Call.....</a>	<a href="#">13</a>
<a href="#">5.3.1 Answer A Call.....</a>	<a href="#">13</a>
<a href="#">5.3.2 Reject A Call.....</a>	<a href="#">13</a>
<a href="#">5.3.3 End A Cal.....</a>	<a href="#">13</a>
<a href="#">5.4 SMS Remote Control Function.....</a>	<a href="#">13</a>
<a href="#">5.4.1 Set Love Number.....</a>	<a href="#">13</a>
<a href="#">5.4.2 Set SOS Number.....</a>	<a href="#">13</a>
<a href="#">5.4.3 Add New Entry.....</a>	<a href="#">14</a>
<a href="#">5.4.4 Set Alarm.....</a>	<a href="#">14</a>
<a href="#">6. Shortcut Key.....</a>	<a href="#">14</a>
<a href="#">6.1 Electric TorchShortcut Key.....</a>	<a href="#">14</a>
<a href="#">6.2 SOS Shortcut Key.....</a>	<a href="#">14</a>
<a href="#">6.3 Love Number.....</a>	<a href="#">15</a>
<a href="#">7. Care.....</a>	<a href="#">15</a>
<a href="#">7.1 One Key Help.....</a>	<a href="#">15</a>
<a href="#">7.2 Love number.....</a>	<a href="#">16</a>
<a href="#">8. Phonebook.....</a>	<a href="#">16</a>
<a href="#">8.1 Add new contact.....</a>	<a href="#">16</a>
<a href="#">8.2 Caller groups.....</a>	<a href="#">16</a>
<a href="#">8.3 Phonebook Settings.....</a>	<a href="#">17</a>
<a href="#">8.4 Select.....</a>	<a href="#">17</a>
<a href="#">9. Messages.....</a>	<a href="#">17</a>
<a href="#">9.1 Write Message.....</a>	<a href="#">18</a>
<a href="#">9.2 Inbox.....</a>	<a href="#">18</a>
<a href="#">9.3 Drafts.....</a>	<a href="#">19</a>
<a href="#">9.3 Outbox.....</a>	<a href="#">19</a>
<a href="#">9.4 Send message.....</a>	<a href="#">19</a>
<a href="#">9.4 Delete message.....</a>	<a href="#">20</a>
<a href="#">9.5 MMS.....</a>	<a href="#">20</a>
<a href="#">9.5.1 Write message.....</a>	<a href="#">20</a>

<a href="#">9.5.2 Inbox.....</a>	<a href="#">20</a>
<a href="#">9.5.3 Outbox.....</a>	<a href="#">20</a>
<a href="#">9.5.4 Drafts.....</a>	<a href="#">20</a>
<a href="#">9.5.5 MMS settings.....</a>	<a href="#">21</a>
<a href="#">9.6 Broadcast Message.....</a>	<a href="#">22</a>
<a href="#">9.6.1 Receive Mode.....</a>	<a href="#">22</a>
<a href="#">9.6.2 Read Message.....</a>	<a href="#">22</a>
<a href="#">9.6.3 Languages.....</a>	<a href="#">22</a>
<a href="#">9.6.4 Channel Setting.....</a>	<a href="#">22</a>
<a href="#">9.7 Templates.....</a>	<a href="#">23</a>
<a href="#">9.8 SMS Settings.....</a>	<a href="#">23</a>
<a href="#">9.8.1 Profile Setting.....</a>	<a href="#">23</a>
<a href="#">9.8.2 Voicemail server.....</a>	<a href="#">23</a>
<a href="#">9.8.3 Common Setting.....</a>	<a href="#">24</a>
<a href="#">9.8.4 Memory Status.....</a>	<a href="#">24</a>
<a href="#">9.8.5 Preferred Storage.....</a>	<a href="#">24</a>
<a href="#">10. Call history.....</a>	<a href="#">24</a>
<a href="#">10.1 Call history.....</a>	<a href="#">24</a>
<a href="#">10.1.1 Missed calls.....</a>	<a href="#">24</a>
<a href="#">10.1.2 Dialed calls.....</a>	<a href="#">25</a>
<a href="#">10.1.3 Received calls.....</a>	<a href="#">25</a>
<a href="#">10.1.4 Delete call log.....</a>	<a href="#">25</a>
<a href="#">10.1.5 Call timers.....</a>	<a href="#">25</a>
<a href="#">10.1.6 call cost.....</a>	<a href="#">25</a>
<a href="#">10.1.7 Text msg.counter.....</a>	<a href="#">25</a>
<a href="#">10.1.8 GPRS counter.....</a>	<a href="#">26</a>
<a href="#">10.2 call settings.....</a>	<a href="#">26</a>
<a href="#">10.2.1 Call ID: .....</a>	<a href="#">26</a>
<a href="#">10.2.2 Call Waiting: .....</a>	<a href="#">26</a>
<a href="#">10.2.3 Call Divert: .....</a>	<a href="#">26</a>
<a href="#">10.2.4 Call Barring: .....</a>	<a href="#">26</a>
<a href="#">10.2.5Line Switching:.....</a>	<a href="#">26</a>
<a href="#">10.2.6Closed User Group: .....</a>	<a href="#">26</a>
<a href="#">10.2.7 Advance settings: .....</a>	<a href="#">26</a>
<a href="#">11 Multimedia.....</a>	<a href="#">27</a>
<a href="#">11.1FM Radio.....</a>	<a href="#">27</a>
<a href="#">11.2. Camera.....</a>	<a href="#">27</a>
<a href="#">11.2.1 Photos.....</a>	<a href="#">27</a>
<a href="#">11.2.2 Camera Settings.....</a>	<a href="#">27</a>
<a href="#">11.2.3 Image Settings.....</a>	<a href="#">27</a>
<a href="#">11.2.4 White Balance.....</a>	<a href="#">28</a>
<a href="#">11.2.5 Scene Mode.....</a>	<a href="#">28</a>
<a href="#">11.2.6 Effect Setting.....</a>	<a href="#">28</a>
<a href="#">11.2.7 Storage.....</a>	<a href="#">28</a>
<a href="#">11.2.8 Restore Default.....</a>	<a href="#">28</a>
<a href="#">11.3. Image viewer.....</a>	<a href="#">28</a>
<a href="#">11.4. Video Recorder.....</a>	<a href="#">28</a>

<a href="#">11.4.1 Camcorder Setting.....</a>	<a href="#">29</a>
<a href="#">11.4.2 Video Settings.....</a>	<a href="#">29</a>
<a href="#">11.4.3 White balance.....</a>	<a href="#">29</a>
<a href="#">11.4.4 Effect Setting.....</a>	<a href="#">29</a>
<a href="#">11.4.5 Storage.....</a>	<a href="#">29</a>
<a href="#">11.4.6 Restore Default.....</a>	<a href="#">29</a>
<a href="#">11.5 Video Player.....</a>	<a href="#">29</a>
<a href="#">11.6 Audio Player.....</a>	<a href="#">30</a>
<a href="#">11.7 Sound Recorder.....</a>	<a href="#">30</a>
<a href="#">12. User Profiles.....</a>	<a href="#">31</a>
<a href="#">12.1 Activate.....</a>	<a href="#">31</a>
<a href="#">12.2 Customize.....</a>	<a href="#">31</a>
<a href="#">13. Settings.....</a>	<a href="#">31</a>
<a href="#">13.1 Flight mode.....</a>	<a href="#">31</a>
<a href="#">13.2 Phone settings.....</a>	<a href="#">32</a>
<a href="#">13.2.1 Time and date.....</a>	<a href="#">32</a>
<a href="#">13.2.2 Schedule Power On/Off.....</a>	<a href="#">32</a>
<a href="#">13.2.3 Language.....</a>	<a href="#">32</a>
<a href="#">13.2.4 Pref. Input methods.....</a>	<a href="#">32</a>
<a href="#">13.2.5 Display Settings.....</a>	<a href="#">32</a>
<a href="#">13.2.6 Greeting text.....</a>	<a href="#">32</a>
<a href="#">13.2.7 Auto up date of date and time.....</a>	<a href="#">33</a>
<a href="#">13.2.8 Light led.....</a>	<a href="#">33</a>
<a href="#">13.2.9 LCD backlight.....</a>	<a href="#">33</a>
<a href="#">13.3 Network settings.....</a>	<a href="#">33</a>
<a href="#">13.4 Security settings.....</a>	<a href="#">33</a>
<a href="#">13.4.1 Security settings.....</a>	<a href="#">33</a>
<a href="#">13.4.2 Phone Lock.....</a>	<a href="#">33</a>
<a href="#">13.4.3 Auto Keypad Lock.....</a>	<a href="#">34</a>
<a href="#">13.4.4 Change Password.....</a>	<a href="#">34</a>
<a href="#">13.5 Restore Factory Settings.....</a>	<a href="#">34</a>
<a href="#">13.6 Sound effects.....</a>	<a href="#">34</a>
<a href="#">14. Organizer.....</a>	<a href="#">34</a>
<a href="#">14.1. Calculator.....</a>	<a href="#">34</a>
<a href="#">14.2. Calendar.....</a>	<a href="#">34</a>
<a href="#">14.3. Tasks.....</a>	<a href="#">35</a>
<a href="#">14.4 Alarm.....</a>	<a href="#">35</a>
<a href="#">14.5 World Clock.....</a>	<a href="#">35</a>
<a href="#">14.6 Unit converter.....</a>	<a href="#">35</a>
<a href="#">14.7 Currency converter.....</a>	<a href="#">35</a>
<a href="#">14.8 Stopwatch.....</a>	<a href="#">35</a>
<a href="#">14.9 Fun &amp; Games.....</a>	<a href="#">36</a>
<a href="#">14.9.1 Games.....</a>	<a href="#">36</a>
<a href="#">14.10 File Manager.....</a>	<a href="#">36</a>
<a href="#">15. Services.....</a>	<a href="#">36</a>
<a href="#">15.1 Bluetooth.....</a>	<a href="#">36</a>
<a href="#">15.2 Internet service.....</a>	<a href="#">37</a>

<a href="#">15.3 Data Account.....</a>	<a href="#">37</a>
<a href="#">16. Appendix.....</a>	<a href="#">37</a>
<a href="#">16.1 Basic Spec.....</a>	<a href="#">37</a>
<a href="#">16.2 Care and Maintenance.....</a>	<a href="#">37</a>
<a href="#">16.2.1 Battery and Charger Safety.....</a>	<a href="#">37</a>
<a href="#">16.2.2 Phone Maintenance.....</a>	<a href="#">38</a>
<a href="#">16.3 FAQ.....</a>	<a href="#">39</a>
<a href="#">16.4 Caution.....</a>	<a href="#">40</a>

## 1. Safety and Precautions

 Please read these simple guidelines. Not following them may be dangerous or illegal.



Switch off the phone in the vicinity of chemical plants, gas stations and other locations containing explosive objects.




Keep the phone far away from children.





When driving, please use the hands free calling device (purchased separately) to ensure safety. Please park the car at roadside for communication unless in emergency.




Switch off the phone when boarding an airplane and do not switch the phone on during the flight.


 Be careful when using the mobile phone in the vicinity of such devices as pacemakers, hearing aids and other electro-medical equipment, which may be interfered by the mobile phone.


 No guarantee for the accessories and parts not produced by the original factory.


 Never attempt to disassemble the phone by yourself. Contact the supplier in case of any trouble with your mobile phone.

Do not recharge the phone without battery being installed.

 Charge the phone in well-ventilated environment and keep away from inflammable and high explosive articles.

To avoid  demagnetization, keep the handset away from magnetic substances, such as magnetic discs or credit cards.

 Keep the phone away from liquid. If soaking or erosion occurs, take the battery out and contact the supplier.

 Avoid using the phone in too high or too low temperature environments. Never leave the phone exposed under direct sunlight, in high humidity or in a dusty environment.

 Do not use liquid or a damp cloth with strong detergents to clean the handset.

## Charging your battery

Your device is powered by a rechargeable battery. The full performance of a new battery is achieved only after two or three complete charge and discharge cycles. The battery can be charged and discharged hundreds of times but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, replace the battery. Use only approved batteries and recharge your battery only with approved chargers designated for this device.

If a replacement battery is being used for the first time or if the battery has not been used for a long period, it may be necessary to connect the charger, disconnect it and then reconnect it to begin charging the battery.

Unplug the charger from the electrical plug and the device when not in use. Do not leave a fully charged battery connected to a charger, since overcharging may shorten its lifetime. If left unused, a fully charged battery will lose its charge over time.

If the battery is completely discharged, it may take a few minutes before the charging indicator appears on the display or before any calls can be made.

Use the battery only for its intended purpose. Never use any charger or battery that is damaged.

Do not short-circuit the battery. Accidental short-circuiting will occur when a metallic object such as a coin, clip, or pen causes direct connection of the positive (+)

metallic object such as a coin, clip, or pin causes direct connection of the positive (+) and negative (-) terminals of the battery. (These look like metal strips on the battery.) This might happen, for example, when you carry a spare battery in your pocket or purse. Short-circuiting the terminals may damage the battery or the connecting object.

Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 15°C and 25°C (59°F and 77°F). A device with a hot or cold battery may not work temporarily, even when the battery is fully charged. Battery performance is particularly limited in temperatures well below freezing.

Do not dispose of batteries in a fire as they may explode. Batteries may also explode if damaged. Dispose of batteries according to local regulations. Please recycle when possible. Do not dispose as household waste.

**Note: Actual operation time of the battery varies according to operation mode, network settings and call settings.**

**Note:**

1. After the phone has run out of battery, we recommend you recharge in time.
2. To ensure safety, do not change the parts and accessories of the battery by yourself or take off the battery shell.
3. We suggest you only use the original battery supplied with your phone by our company to avoid any damage to your phone.
4. The temperature range for charging the phone is 0°C -40°C. Do not charge the battery in too high or too low temperatures.
5. Do not use the mobile phone during charging. Keep the phone away from charger before you use it.
6. Please don't keep charging for a long time. Pull out the charger quickly after the battery is fully charged.

## **FURTHER SAFETY INFORMATION**

The unit and the accessories can contain small parts. Keep them out of the reach of small children.

## **OPERATING ENVIRONMENT**

Remember to follow any particular rules that may apply wherever you happen to be, and always turn off the unit whenever its use is forbidden, or it can cause interference or danger. Only use the units in its normal user position.

This unit complies with guidelines for radiation when it is used either in a normal position against your ear, or when it is at least 2.2 cm (7/8 inch) from your body. If the unit is carried close to your body in a case, belt holder or other holder, these should not contain any metal, and the product should be placed at the distance from your body specified above. Make sure that the distance instructions above are followed until the transfer is complete.

Parts of the unit are magnetic, The unit can attract metal object. Do not keep credit cards or other magnetic media near the unit, as information stored on them can be erase.

## **MEDICAL UNITS**

The use of equipment that transmits radio signals, e.g. mobile phones, can interfere with insufficiently protected medical apparatus. Consult a doctor or the manufacturer of the apparatus to determine if it has adequate protection against external radio signals, or if you have any question. If notices have been put up at health care facilities instructing you to turn off the unit while you are there, you should comply. Hospitals and other health care facilities sometimes use equipment that can be sensitive to external radio signals.

### **PACEMAKER**

Pacemaker manufacturers recommend a distance at least 15 cm. (6 inches) between a mobile phone and a pacemaker to avoid the risk of interference with the pacemaker. These recommendations are in accordance with independent research and recommendations from Wireless Technology Research. People with pacemakers should:

- always keep the unit at a distance of at least 15 cm from the pacemaker
- not carry the unit in a breast pocket
- hold the unit against the ear on the opposite side from the pacemaker to reduce the risk of interference

If you suspect that there is a risk of interference, turn off the unit and move it further away.

### **HEARING AIDS**

Some digital wireless units can cause interference to some hearing aids. Contact yr operator in case of interference.

### **VEHICLES**

Radio signals can affect electronic systems in motor vehicles (e.g. electronic fuel injection, ABS brakes, automatic cruise control, air bag systems) that have been incorrectly installed or are inadequately protected. Contact the manufacturer or its representative for more information about yr vehicle or any additional equipment.

Do not keep or transport flammable liquid gases or explosives together with the unit or its accessories. For vehicles equipped with air bags: remember that air bags fill with air with considerable force.

Do not place objects, including fixed or portable radio equipment in the area above the airbag or the area where it might expand. Serious injuries may be caused if the mobile phone equipment is incorrectly installed and the airbag fills with air.

It is forbidden to use the unit whilst flying. Turn off the unit before you board a plane. Using wireless telecom units inside a plane can involve risk for air safety and interfere with telecommunications. It can also be illegal.

### **AREAS WITH EXPLOSION RISK**

Always turn off the unit when you are in an area where there is a risk of explosion and follow all signs and instructions. An explosion risk exists in the places that include areas where you are normally requested to turn off your car engine. Within such an area, sparks can cause explosion or fire which can lead to personal injuries, even death.

Turn off the unit at filling stations i.e. near petrol pumps and garages.

Follow the restrictions that are in force on the use of radio equipment near places where fuel is stored and sold, chemical factories and places where blasting is in progress.

Areas with risk for explosion are often – but not always – clearly marked. This also applies to below decks on ships: the transport or storage of chemicals; vehicles that use liquid fuel (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust or metal powder.

## EMERGENCY CALLS

### IMPORTANT!

Mobile phones such as this unit use radio signals, the mobile phone network, the terrestrial network and user-programmed functions. This means that connection in all circumstances cannot be guaranteed.

Therefore you should never rely solely on a mobile phone for very important calls such as medical emergencies.

## CERTIFICATION INFORMATION (SAR)

This model meets international guidelines for exposure to radio waves. Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines.

These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The ICNIRP SAR limit for mobile devices used by the general public is 2.0 W/kg.

As SAR is measured utilising the device's highest transmitting power, the actual SAR of the device while operating is typically below the above indicated level.

This is due to automatic changes to the power level of the device to ensure it only uses the minimum level requested to reach the network.

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure.

The World Health Organization has stated that present scientific information does not indicate the need for any special precaution for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a “hands-free” device to keep the mobile phone away from the head and body.

## 2. Your Phone







## 2.1 Keys and Parts

Keys	Description
1、 Love Number Shortcut Key	Press it to enter the love number.
2、 Left Soft Key/ Menu Key	Press it to enter the menu.
3、 Right Soft Key	Press it to one key help.
4、 Up and Downe Key	Press it to Select menu
5、 Talk Key	Dials a phone number and answers a call. In idle: press to show the most recently dialed number. Has the menu and the confirmation function
6、 End Key	Ends or rejects a call. Long press it to power on or off. Press it to exit to the standby screen.
7、 Number Key	In idle, press to input numbers; Long press 2-9 to speed dial; In editor, press them to input numbers or words.
8、 * Key	In idle, press it to input “*”/ “+” / “P”/“W” In editor, press to input sign;
9、 # Key	In idle, long press it to switch the user profiles; In editor, press to change input method.
10、 Volume Key	Press it to adjust the volume.
11 、 Electric Torch Shortcut Key	Press it to switch on or off the flashlight
12、 SOS Shortcut Key	Press it to one key help.

## 2.2Screen Icons

Signal Indicator, More bars indicates stronger signal.

Alarm clock

Battery Level Indicator

Keypad lock

Handset mode

Missed call(s)

### Ring mode

Ring

Vibration Only

Vibration Then Ring

### 3. Get started

#### 3.1 Install SIM Card and Battery

For availability information on using SIM card services, contact your SIM card vendor.

⚠️Notices: Keep all SIM cards out of the reach of the children;

Please do not touch the metal area to avoid losing and breaking the information in the SIM card. Put the SIM card far from electricity and magnetism.

Remove Battery:

Long press the End Key to power off.

Install or remove the back cover.

Take out battery: face the backside of the phone, take out the battery just by lifting it up.

Install SIM card

Put the card into the groove gently and push it down until it doesn't move.

The sim card recognition language, may the automatic diagnosis SIM card language.

#### 3.2 Charging

Use only original charger or authorized one for this phone.

Insert the plug (with arrow on it) of your charger to the charging port at the base of your phone.

When you begin to charge the battery, the stripe of Signal Strength on the right corner of the screen starts to roll. The battery is fully charged when the stripe becomes full and stops rolling.

#### 3.3 Power on/off

Long press End Key to power on.

Long press End Key again to power off.

#### 3.4 Use Headset

insert the headset to the wall socket.,

### 4. Menu Tree

The first class	The second class	The third class
Love Number		
Phonebook	Add new contact	Add new contact
		Caller groups
		Phonebook settings
Messaging	Write message	
	Inbox	
	Drafts	
	Outbox	
	Sent message	

	Sent message	
	Delete message	
	MMS	
	Broadcast message	
	Templates	
	SMS settings	
Call center	Call history	
	Call settings	
Multimedia	FM radio	
	Camera	
	Image viewer	
	video Recorder	
	Video player	
	Audio player	
	Sound recorder	
User profiles	General	
	Meeting	
	Outdoor	
	Indoor	
	Headset	
	Bluetooth	
Settings	Flight mode	Off
		On
	Phone Settings	Time and date
		Schedule power on/off
		Language
		Pref. input methods
		Display settings
		Greeting text
		Auto update of date and time
		LCD backlight
	Display Settings	Wallpaper
		Screen saver
		Power on display
		Power off display
		Main menu effect
		Show date and time on
		LCD backlight
	Network settings	SIM1 network settings
		SIM2 network settings
	Security settings	SIM1 Security settings

	Security settings	SIM1 Security settings
		SIM2 Security settings
		Phone lock
		Mobile Tracker
		Auto keypad lock
		Change password
Organizer	Calculator	
	Calendar	
	Tasks	
	Alarm	
	World clock	
	Unit converter	
	Currency converter	
	Stopwatch	
	Fun & Games	
	Ebook reader	
	File manger	
Services	Bluetooth	
	Internet service	
	Data account	

## 5. Basic Function

### 5.1 Add New Entry

- 1) In the idle, input the number, then press Menu Key to select to SIM or to Phone;
- 2) Fill in the fields you want, and select OK.

### 5.2 Make a call

1) In the idle mode, enter the area code and the phone number, and then press Talk Key.

⚠️**Notices:** Press the C Key to remove a number, long press to remove all.

2) To make a call from the Phone Book. Scroll to the desired name, or enter the first letters of the name, and scroll to the desired name. To call the number, press Talk Key.

### 5.3 Answer or Reject A Call

#### 5.3.1 Answer A Call

To answer the call, press Talk Key.

#### 5.3.2 Reject A Call

Press the End Key to reject a call.

#### 5.3.3 End A Call

Press End Key to end a call.

### 5.4 SMS Remote Control Function

The user may through another handset SMS remote control this mobile phone,

be possible the remote control set love number, remote control to establish one to seek help the number, the remote control increase the telephone number, the remote control establishment alarm clock which saves on the handset.

#### 5.4.1 Set Love Number

**Edit:** AT+L:name:num

[For example:] AT+L:Jack:1333333333 Jack' Love Number is 1333333333.

You can save 5 Love Numbers, when the limit is reached, the last number will be deleted.

#### 5.4.2 Set SOS Number

**Edit:** AT+S:name:num

[For example:] AT+S:Jack:1333333333 Jack' SOS Number is 1333333333.

You can save 1 Love Number, when you set a new number, the old number will be deleted.

## 6. Shortcut Key

### 6.1 Electric Torch Shortcut Key

Press the Electric Torch Shortcut Key to switch on/off the electric torch.

### 6.2 SOS Shortcut Key

Press the SOS Shortcut Key to dial the SOS number. If the number is empty, you can set:

**Settings:** You can set On or Off. Select One Key help Setting this item, presses the Menu Key or Left soft Key once turn on the One Key Help Settings, then presses once the Menu Key or the Left soft Key again turn off One Key help Settings.

**Call Wait:** You can select 1 Second/3 Seconds/ 5 Seconds/10 Seconds. For example: Chooses for 1 second to press the Menu Key or the Left soft Keysave your selection;

**SOS Num:** You can set one key help number.

**SOS SMS:** You can set On or Off. The choice One Key Help SMS one item to press the Menu Key or a Left soft Keyturn on One Key Help SMS remind, then presses a time Menu Key or the Left soft Keyturn off One Key Help SMS reminder again;

**SOS Context:** You can set one key help SMS's context. Presses the Menu Key or the Left soft Keyto enter theedition contact surface, after the input SMS content presses the Menu Key or the Left soft Key then presses the C key to prompt whether "the storage", presses the Menu Key or the TLeft soft Key preservation, presses the C key not to preserve the establishment.

You can also press the Menu Key to select [Settings->One Key Help] to set it.

### 6.3 Love Number

You can select love number Shortcut Key , but love number empty

Press selectLeft Soft Key:

**Edit:** You can edit the love number.

1) presses the Menu Key to enter the edition contact surface, 2) presses the v Menu Key or Left soft Key enters the edition name or the edition number, after 3) inputs the name and the number presses the Menu Key or Left soft Key prompts whether "the storage", presses the Menu Key or Left soft Key preservation, presses the C key not

to preserve the establishment.

**Delete:** You can Delete the love number.

Saved has the dear ones number record, the choice “Erase”, Presses the theMenu Key or Left soft Keyprompts whether “Erase”, Continues to press the Menu Key or Left soft Key deletes this record, presses the C key not to delete this record.

## 7. Care

In the idle, select Care.

You can set One Key Help or Love Number:

### 7.1 One Key Help

Press Menu Key or Left soft Key enter “One Key Help”,you can view and set, **Settings , Call Wait, SOS Num, SOS SMS,SOS Context.**

- > **Settings:**Select One Key help Setting this item, presses the Menu Key or Left soft Keyonce turn on the One Key Help Settings, then presses once the Menu Key or the TLeft soft Key again turn off One Key help Settings.
- > **Call Wait:**You can select 1 Second/3 Seconds/ 5 Seconds/10 Seconds. For example: Chooses for 1 second to press the Menu Key or the Left soft Keysave your selection;
- > **SOS Num:**You can set one key help number.
- > **SOS SMS:**You can set On or Off. The choice SOS SMS one item to press the Menu Key or a Left soft Keyturn on One Key Help SMS remind, then presses a time Menu Key or the Left soft Keyturn off One Key Help SMS reminder again;
- **SOS Context:** You can set SOS SMS context. Presses the Menu Key or the Left soft keyto enter theedition contact surface, after the input SMS content presses the Menu Key or the Left soft key then presses the C key to prompt whether “the storage”, presses the Menu Key or theLeft soft keypreservation, presses the C key not to preserve the establishment.
- SOS light: You can select On or Off

### 7.2 Love number

In the idle, press the Menu Key to select [Love Number]

Press select Left soft key:

**Edit:** You can edit the love number.

1) presses the Menu Key to enter the edition contact surface, 2) presses the v Menu Key or Left soft key enters the edition name or the edition number, after 3) inputs the name and the number presses the Menu Key or Left soft key prompts whether “the storage”, presses the Menu Key or Left soft key preservation, presses the C key not to preserve the establishment.

**Delete:** You can Delete the love number.

Saved has the dear ones number record, the choice “Erase”, Presses the theMenu Key or Talk Key prompts whether “Erase”, Continues to press the Menu Key or Left soft key deletes this record, presses the C key not to delete this record.

## 8. Phonebook

You may save the contacts in the phone or SIM card.。

### 8.1 Add new contact

You have three methods to add new entry:

### **1: Edit directly**

- 3) In the idle, input the number, then press Save to select to SIM or to Phone;
- 4) Fill in the fields you want, and select OK.

### **2: Phone Book—}Add new contact**

See above.

### **3: From Call history**

From Call History select a number ->OK->Option->Save to Phonebook->SIMto Phone.

## **8.2 Caller groups**

You can Add new group and edit the group with group Name ,Caller ringtone and Caller picture ,.

## **8.3 Phonebook Settings**

You can set **Preferred storage,Speed dial,My number,Extra numbers,Memory Status,Copy contacts,Move contacts,Delete all contacts,**

- **Preferred storage:** you can select storage to Preferred save contact
- **Speed dial:** you can set Speed dial On or off and edit Speed dial number.
- **My number:** you can edit and send My number.
- **Memory Status:** You can View SIM and phone storage status
- **Copy contacts:** You can select From SIM to phone / From Phone to SIM
- **Move contacts:** You can select From SIM to phone / From Phone to SIM
- **Delete all contacts:** You can Select delete From SIM1 or From phone

## **8.4 Select**

You can select a record ,then select option , you can set **view, send text message, send multimedia message, call, Edit, Delete, copy, move, send contact, add to blacklist, mark several, caller groups, phonebook settings.**

- **View:** You can view the name and number.
- **send text message:** You can edit and send message from the number.
- **send multimedia message:** You can edit and send multimedia message from the number.
- **Call:** You can dial the number.
- **Edit:** You can edit the record.
- **Delete:** You can select delete the record.
- **Copy:** You can select copy the record to phone/to SIM/to file.
- **Move:** You can select From SIM to phone / From Phone to SIM
- **send contact:** You can select as text message, as multimedia message, via Bluetooth.
- **add to blacklist:** You can set the contact to blacklist.
- **Mark several:** You can select mark several contact.
- **caller groups:** You can select add the contact to new group.
- **phonebook settings:** see 8.3

## **9. Messages**

Your phone can send, receive SMS, MMS, broadcast message and so on. These are network service, please contact your network operator or service provider before using it.

Messages are saved in phone or SIM card. When one of them is full that messages

will be saved in the other. When both of their limits are reached, the message icon will wink ceaselessly, please delete some messages, otherwise the new message will not be received.

## 9.1 Write Message

Your phone can edit and send message.

In the idle, presses **Menu Key** then presses **Up key** or **Down key** -> select **[Messages->Write Message]**

In the edit interface,( Notices : The input method please refer to the 13th chapter “**Text Input**”

.)you can press the **Menu Key** to display the options:**Send to, Input Method, Use Template, Advanced, Save to Drafts.**

**Send to :**You can select Send only, Save and send, Save, Send to many, Send by group.

**Input method:** You can select Input Method.

**Insert templates:**View the 10 items template and insert them.

**Advanced:**

- **Insert object:** You can insert Picture, My picture, Predefined animation, My animation, Melody, My melody, Predefined sound.
- **Insert number:** You can insert my phonebook number
- **Insert name:** You can insert my phonebook name
- **Insert bookmark:** You can insert bookmark
- **Text Format:** You can define Text size, Text style, Alignment or New paragraph.

**Save to Drafts:** You can select save to Drafts

## 9.2 Inbox

All received messages are saved in the inbox, you can edit or forward message and so on.

Select **Messages, Inbox** then press **Select left soft key** option to display the options:

- **Reply:** Reply this message, the addressee is the old addresser.
- **Call sender:**
- **Forward:** Forward send the message.
- **Delete:** Delete the current message.
- **Delete all:** Delete the current all message
- **Edit:** Edit the current message.
- **Advanced:**
  - **Use number:** Extract the number and then dial or save to phone book.
  - **Use URL:** Use the URL in the message.
  - **Use USSD:** Use the USSD in the message.
  - **Copy to Phone:** to copy the current message saved in the SIM to phone.
  - **Move to Phone:**to move the current message saved in the SIM to phone.
  - **Copy All:** Copy all messages.
  - **Move All:** Move all messages.
  - **Use Number:** Extract the number and then dial or save to phone book.

## 9.3 Drafts

The Drafts is a temporary storage place for messages that are waiting to be sent.

◆ Select **Messages, Drafts** and then press **Talk key**

• While reading the message, press **Options** to select through the list and press



- ◆ While reading the message, press **Options** to select through the list and press **Select** at the highlighted option: **Send** , **Edit**, **Delete**, **Delete all** , **Advanced** (Use number, use URL, Use USSD, Copy to phone, Move to phone, Copy all, Move all)

### 9.3 Outbox

You can select SIM1 Outbox or SIM2 Outbox.




The Outbox folder is a temporary storage place for messages that are waiting to be sent.

- **Resend:** Send this message, please choose Send Only or Send to Many.
- **Edit:** Edit the current message.
- **Delete:** Delete the current message.
- **Delete all:** Delete all message
- **Advanced:** You can select **Use number**, **Use URL**, **Use USSD**, **Copy to phone**, **Move to phone**, **Copy all**, **Move all**.

### 9.4 Send message

All send messages are saved in the inbox, you can edit or forward message and so on.

Select **Messages**, **Send messages** then press **Select Talk Key** option to display the options:

- **Forward:** Forward send the message.
  - **Delete:** Delete the current message
  - **Delete all:** Delete all messages.
  - **Advanced:**
    - **Use number:** Extract the number and then dial or save to phone book.
    - **Use URL:** Use the URL in the message.
      - ◆ **Save objects:** Save the picture or sound which in the message.
      - ◆  or  icons indicate whether an SMS has been read or is still unread.
      - ◆  Icon indicates when an SMS is in an illegible message format or an incomplete message which cannot be displayed in the **Message** body screen.
      - ◆ incomplete message which cannot be displayed in the **Message** body screen.
- While reading a message, press **Options** to select through the list of options and press **Select** at the highlighted option. The **Inbox** message option list includes: **Reply**, **Delete**, **Edit**, **Forward**, **Copy to phone(or SIM)**, **Move to phone(or SIM)**, **Copy all**, **Move all**, **User number**, **Use URL**.
- ✓ **Copy to phone:** Copy the current message to phone
  - ✓ **Move to phone:** Move the current message to phone
  - ✓ **Copy all:** Copy all messages.
  - ✓ **Move all:** Move all messages

### 9.4 Delete message

You can select Delete message to (Inbox , Draft , outbox , Sent message , all message)

### 9.5 MMS

#### 9.5.1 Write message

In the idle, select [Menu->Messages->MMS->Write message] to edit: The MMS editor screen appear.

**To:** To edit the phone number or e-mail address of the recipient.

**Cc:** To add the phone number or e-mail address of the CC recipient.

**Bcc:** To add the phone number or e-mail address of the BCC recipient.


**Subject:** to enter or edit the subject of the MMS.

**Edit content:** To edit the content, you can edit TEXT, Add image/ Audio /Attachment/ Slide, Preview and Slide time.

### 9.5.2 Inbox

All received MMS are saved in the inbox, you can edit or forward MMS and so on.

◆  or  icons indicate whether a MMS has been read or is still unread.

 Icon indicates when an MMS is in an illegible message format or an

### 9.5.3 Outbox

The Outbox folder is a temporary storage place for MMS that have been sent.

### 9.5.4 Drafts

The Drafts folder is a temporary storage place for MMS that are waiting to be sent.

### 9.5.5 MMS settings

You can set Compose, Send, Receive, Filter, Server Profile, Memory status.

**Auto signature:** You can turn on or off .

**Signature :** You can edit the signature content.

#### 1 Profiles

Select **Message settings**, then choose the Server profile according to your network operator

You can also **Edit the MMS profiles**

**Note:** This service is related to your network operator. Please contact your operator for detailed settings and troubleshooting.

#### 2 Common settings

##### • Compose

Select Message Settings, then choose the Compose you can setting:

- > **Creation mode:** You can choose Free or Restricted.
- > **Picture resizing:** You can choose 160\*120,320\*240 or off.

Select Message Settings, then choose the Compose you can setting:

- > **Creation mode:** You can choose Free or Restricted.
- > **Picture resizing:** You can choose 160\*120,320\*240 or off.
- > **Delivery report:** You can turn this function **On** if you want to receive delivery report from your service provider.
- > **Read report:** You can turn this function **On** if you want to receive read notification from your service provider.
- > **Priority:** You can choose message priority; **Medium, High, and Low.**
- > **Slide timing:** Slide timing value between 1 and 60.
- > **Delivery time:** The options are: **Immediate/ 1 hours later /12hours later /24 hours later**

##### • Send

Select Message Settings, then choose the Send you can setting:

Select Message Settings, then choose the Send you can setting:

- **Validity period:** The options are: **Max/1hour/6hours/12hours/1Day/1Week.**
- **Delivery report:** You can turn this function **On** if you want to receive delivery report from your service provider.
- **Read report:** You can turn this function **On** if you want to receive read notification from your service provider.
- **Priority:** You can choose message priority; **Medium, High, and Low.**
- **Slide timing:** Slide timing value between 1 and 60.
- **Delivery time:** The options are: **Immediate/ 1 hours later /12hours later /24 hours later**

- **Retrieve**

- **Home network:** The options are: **Immediate/Rejected/Delayed.**
- **Roaming:** The options are: As home/Delayed/Rejected.
- **Read report:** The options are: **On request/Send/Never Send.**
- **Delivery report:** You can turn this function **On** if you want to receive delivery report from your service provider.

- **Filter**

You can turn this function **OFF** to filter unwanted advertisements on your phone.

- **Anonymous:** You can choose Allow or reject.
- **Advertisement:** You can choose Allow or reject.

- **Memory status**

You can view SIM and phone memory status.

## 9.6 Broadcast Message

Broadcast messages refer to public messages sent by your network operator. If you use the broadcast message service you can receive messages on all different subjects from your network operator such as: the weather, taxis, hospitals, etc. Please contact your network operator for available subjects. When you enter the “**Broadcast Message**” submenu you will see four menu options: “**Receive Mode**”, “**Read Message**”, “**Languages**” and “**Channel Setting**”.

**Note:** The network operators must support the “**Broadcast Message**” function for it to be available .

### 9.6.1 Receive Mode

Select On or Off.

### 9.6.2 Read Message

You can read current broadcast message through “**Read Message**” In the read interface, select delete to delete the current message.

### 9.6.3 Languages

All Languages allow you to receive Broadcast messages in every possible language.

### 9.6.4 Channel Setting

Select the “**Channel Setting**”, can **Add** broadcast channel and set **Channel**

**Title and Channel ID;** can **Select On/Off** operation to preparing broadcast channel, filtrate needless broadcast channel; can select “**Edit**” to reinstall current channel; can select “**Delete**” to delete broadcast channel of preparing.

## 9.7 Templates

View the 10 SMS templates. Click option to View, Write message or Properties.

## 9.8 SMS Settings

When using the short message function you must first make the necessary settings.

Enter the “**Message Settings**” submenu to select operate as follows:

### 9.8.1 Profile Setting

Please contact your network provider to get the **SC Address**. Profile list have one profile, two profiles and four profiles because the different network supports and SIM card. Select one **Profile**(Profile1/2/3/4), press the **Menu Key** can set the **Profile Name**, **SC Address**, **Valid Period** and **Message Type**.

During **Valid Period**, the short message service centre will continuously resend a message until it is received. The message **Valid Period** is applicable for all sent messages. You can set the message **Valid Period** as any of the following: “**1 hour**”, “**6 hours**”, “**12 hours**”, “**1 day**”, “**3days**”, “**1 Week**” or “**maximum**” The network operators must support this function for it to be available. by the **\*Key or # Key** to select one of them, then presses the **C Key** to prompt whether “the storage”, presses the **Menu Key** preservation, presses the **C key** not to preserve the establishment.

**Message Type** can select the **Text**, **Fax**, **Page**, **E-mail** by the **\*Key or # Key** to select one of them, then presses the **C Key** to prompt whether “the storage”, presses the **Menu Key** preservation, presses the **C key** not to preserve the establishment.

**Note: Message Valid Period, Fax, Page and E-mail need support by the network operator.**

### 9.8.2 Voicemail server

Press the **Up/Down keys** to select Services, Press the **Menu Key** to enter the “**Services**” submenu. Here you can use the value-added services provided by your network operator.

Your mobile phone supports Services functions. This service is provided by your network operator. If your SIM card and network operator do not provide this service, then you will not be able to use this function. For more information please contact your network operator.

**Note: Under this submenu have different display if you use the different kind of SIM card.**

### 9.8.3 Common Setting

**Turn On/Off to the Delivery Report.** If you set it as “**On**”, presses the **Menu Key** once, then when the recipient receives your short message, or if the short message is not received for some reason, the short message centre will send a status report so that you can see whether the message has been delivered. If you turn off, after you sent message, have no report prompt.

Note: The network operator must support this function for it to be available.

## 9.8.4 Memory Status

Presses the **Menu Key** enter into **Memory Status** interface, you can view the memory status situation.

## 9.8.5 Preferred Storage

Presses the **Menu Key** enter into Preferred Storage interface, You can presses Up Key or Down Key to select SIM or Phone as the preferred storage, Presses the **Menu Key** to preserve the establishment.

# 10. Call history

## 10.1 Call history

[Menu->Call History]. You can select Left soft key options.

### 10.1.1 Missed calls

If you have a Missed Calls, in the idle will display “ Missed Call !”, press the left soft key to read the phone number.

To view a list of the last 20 phone number from which somebody has tried to call you, select [Menu->Call center->Call History].

1. In the list, select Missed Calls;
2. Select a phone number->OK->Option:

**Delete:** Delete the current log;

**Save to Phonebook:** Save the phone number to Phone Book;

**Call:** Dial the current number;

**Edit:** Edit the current number.

### 10.1.2 Dialed calls

To view the 20 phone numbers that you have most recently called or attempted to call, select [Menu->Call History->Dialed Calls].

### 10.1.3 Received calls

To view a list of the last 20 phone numbers or names from which you have most recently accepted calls, select [ Menu->Call History->Received Calls].

### 10.1.4 Delete call log

You can delete the Missed Calls, Dialed Calls, Received Calls or Delete All.

### 10.1.5 Call timers

To view the duration of your incoming and outgoing calls, select [Menu->Call center->Call history->Call time].

**Last Call:** Display Last Call Time;

**Dialled calls:** Display Total Sent Time;

**Received calls:** Display Total Received Time;

**Reset all:** Let the times into zero.

### 10.1.6 call cost

To view the Call Cost, select [Menu->Call center->Call History->Call Cost].

**Last Call Cost:** Display Last Call Cost;

**Total Cost:** Display Total Cost;

**Reset Cost:** Let the cost into zero.

**Max Cost:** Set Max Cost.

**Price Per Unit:** Display Price Per Unit

To set Max Cost and Price Per Unit need input the PIN2 code.

**⚠Notices:** These are network service, please contact your network operator or service provider.

The actual invoice for calls and services from your service provider may vary, depending on network features rounding off or billing, taxes, and so forth.

### **10.1.7Text msg.counter**

You can view Sent and Received Messages' amount. Press the left soft key to reset.

### **10.1.8GPRS counter**

You can view Sent and Received amount. Select Reset Counter to reset.

## **10.2call settings**

### **10.2.1Call ID:**

You may select Set By Network, Hide Id or Send Id.

### **10.2.2Call Waiting:**

(network service)To set the network to notify you of a new incoming call while you have a call in progress. To request the network to activate call waiting, select Activate. To request the network to deactivate call waiting, select Deactivate. To check whether the function is active, select Query Status.

### **10.2.3Call Divert:**

You can set Divert All Voice Calls, Divert If Unreachable, Divert If No Answer, Divert If Busy, Divert All Data Calls or Cancel All Divert.

### **10.2.4Call Barring:**

Call barring (network service) allows you to restrict the calls that you make and receive with your phone. You can set Outgoing Calls, Incoming Calls, Cancel All or Change Barring PW. To change the settings, you need the barring password from your service provider.

### **10.2.5 Line Switching:**

You can switch Line 1, Line 2.

### **10.2.6 Closed User Group:**

(network service)Press the left soft key to display Group List.

### **10.2.7Advance settings:**

- **Call firewall setting:** You can set Reject from list, Black list number
- **Auto redial:** You can select Off or On
- **IP dial:** You can edit the IP prefix.
- **Call Time Display:** You can select Off or On
- **Call Time Reminder:** You can select Off, Single or Periodic.

- **Auto quick end:** You can set Off or On, the time limit is 1-9999

## 11 Multimedia

In the idle, select [Menu-> Multimedia], you can set FM radio, Camera, Image Viewer, Video Recorder, Video Player, Sound Recorder,

### 11.1 FM Radio

In the idle, press [Menu->Multimedia->FM Radio]:

Press the \* or # key to tune the radio station;

Press the Down key to turn the radio on or off;

Press the Side Key to adjust the volume;

Press the Right Soft Key to back;

Press the Left Key to option:

**Channel List:** You can edit Channel Name and Frequency.

**Manual Input:** You can input the frequency of the radio station.

**Preset Auto Search:** To start automatic tuning the radio station and save them.

**Settings:** You can set Background Play and Loud speaker.

### 11.2. Camera

In the idle, select [Menu-> Multimedia -> Camera], Press left soft Key to display the options:

#### 11.2.1 Photos

See 11.3 Image Viewer.

#### 11.2.2 Camera Settings

You can set LED highlight, Shutter Sound, EV, Banding, Delay Timer, Cont Shot.

#### 11.2.3 Image Settings

You can set Image Size and Image Quality.

#### 11.2.4 White Balance

You can select Auto, Daylight, Tungsten, Fluorescent, Cloud, Incandescence.

#### 11.2.5 Scene Mode

You can select Auto or Night.

#### 11.2.6 Effect Setting

You can select Normal, Grayscale, Sepia, Sepia Green, Sepia Blue, Color Invert. The default is Normal.

#### 11.2.7 Storage

You can select the storage is phone or T card

#### 11.2.8 Restore Default

Reset all of the settings to their default values.

### 11.3. Image viewer

You can View, Browse, Delete images and so on.

Select [Menu-> Multimedia-> Image View], you can view images, press Up Key or Down Key to select a image, and press the Talk key “Option”:

**View:** You can view photo.

**Browse Style:** You can select List Style or Matrix Style.

**Send:** You can send the photo to the multimedia message and Bluetooth

**Use as:** You can Use them Wallpaper, Screen saver, Power on display, power off display and Caller picture

**Rename:** You can rename the current photo.

**Delete:** You can delete the current photo.

**Sort by:** You can choose By Name, By Type, By Time, By Size or None.

**Delete all files:** You can delete all photos.

**Storage:** You can select the storage.

## **11.4. Video Recorder**

Your phone can record video, select Video Recorder to display preview interface. Press Number 5 Key to REC a video and click Stop to stop REC and then save it.

Press Talk Key or Click option to display the options:

### **11.4.1 Camcorder Setting**

You can set EV, Night Mode, Anti-flicker.

### **11.4.2 Video Settings**

You can set Video Quality, Size limit reached, Time limit reached, Record audio.

### **11.4.3 White balance**

You can select Auto, Daylight, Tungsten, Fluorescent, Cloudy, Incandescent.

### **11.4.4 Effect Setting**

You can select Normal, Grayscale, Sepia, Sepia Green, Sepia Blue, Color Invert. The default is Normal.

### **11.4.5 Storage**

You can select the storage.

### **11.4.6 Restore Default**

Reset all of the settings to their default values.

## **11.5 Video Player**

In this submenu, you can play, forward, rename, delete and sort video.

Select Video Player and press Option to display video list, press Up Key or Down Key to select videos, then press Left Soft Key or Click option to display the options:

**Play:** Play the current video.

**Send:** You can forward the video.

**Rename:** You can rename the current video.

**Delete:** Delete the current video.

**Delete all files:** Delete all the videos in the list.

**Sort by:** You can sort videos By Name, By Type, By Time, By Size or None.

**Storage:** You can select the storage.

## **11.6 Audio Player**

Your phone includes a Music player for listening to music tracks. MP3 files stored in **MyMusic** (Default setting) will automatically be detected and added to the default



play list. You can listen to music files with a compatible headset or using the phone's loudspeaker. You can make or answer a call while using the music player. During a call, the music playback is paused.

**Note:** Because of the small dimension of the speaker, in some cases the audio could be distorted, especially at maximum volume and when there are lots of bass sounds.

We recommend you use the stereo headset in order to appreciate the high quality of your music. The Music Player supports MP3 and MIDI formats.

Select Music to display the Audio player interface.

Press Talk Key enter into list.

Press Side \* and # key to adjust volume.

Press Up key to play music and pause.

Press Down Key to stop.

In the list interface, click option to display the options:

**Play:** Play the current music.

**Detail:** You can view the detail of the music.

**Add to ringtones:** Set the current music as ring.

**Refresh list:** Refresh music list.

**Settings:** You can set the play mode.

◆ Select **Options** for:

**Note:** All music tracks must be stored in **My Music** (Default setting). You may not change the path.

- **Pre. play list:** choose play music is in phone or in memory card.
- **List auto gen.:** Select on or off.
- **Repeat:** repeat play the music is once or all, or off
- **Shuffle:** play randomly off your playlist
- **Background play:** Select to allow music to play when you leave music player for other phone functions.
- **Bluetooth settings:**
  - **BT stereo output:** You can select BT stereo output on or off.
  - **BT stereo headset:** search the BT headset and connect it
- **Audio effects :** Select Equalizer or off.
- **Picture Display:** You can select picture 1, picture 2, picture 3.

**Note:** this setting is only active while music is play

## 11.7 Sound Recorder

[Multimedia-> Sound Recorder-> Option]: If the folder is empty, you can Last /Settings.

**New record:** you can make a new record

**List:** You can list a new file.

**Settings:** You can set File Format and Audio Quality.

File Format: You can select AMR or WAV.

In the list, you can press the left soft key "Option" to select Record, Play, Rename, Delete, Delete all files, Use as ,Send

## 12. User Profiles

### 12.1 Activate

In the idle, select [Menu->User Profiles] to display the menu: General, Meeting, Outdoor, Indoor, Headset, Bluetooth. You can set Tone settings, Volume, Alert Type,

Outdoor, Headset, Bluetooth. You can set Tone settings, volume, Alert Type, Intelligent call alert, Ring Type, Extra Tone, Answer Mode.

The Headset mode can not be activated until you plug into headset.

## 12.2 Customize

In the idle, select [Menu->User Profiles->Customize] to set:

**Tone Settings:** You can set Incoming Call, Alarm, Power On, Power Off, Message Tone and Keypad Tone.

**Volume:** To set Ring Tone Volume and Key Tone Volume.

**Alert Type:** You can set Ring, Vib. Only, Vib.and Ring, Vib. Then Ring.

**Intelligent call alert :** you can set Intelligent call alert, When come a call, The phone will give a Intelligent call alert

**Ring Type:** You can select Single, Repeat or Ascending.

**Extra Tone:** You may set On or Off.

**Answer Mode:** You can select Any Key.

## 13. Settings

### 13.1 Flight mode

[Settings->Flight mode ->left soft key], you can select Flight mode on or off.

### 13.2 Phone settings

#### 13.2.1 Time and date

**SetHomeCity:** You can select city.

**Set Time / Date:** You can set Time, Date and Daylight Saving.

**Set Format:** 1.) Time Format: You can select 12-hour or 24-hour.

2.) Date Format: You can select Date Format.

**Update with time zone:** You can select off or on

#### 13.2.2 Schedule Power On/Off

Firstly, you can set Status Enable or Disable, then set Power On or Power Off and edit time.

#### 13.2.3 Language

You can change the language for the display texts in your phone.

#### 13.2.4 Pref. Input methods

You can set Input Method.

Select [Phone Setup-> Preferred Input Methods-> OK], press Up Key or Down Key to choose Input Method

#### 13.2.5 Display Settings

You can set Wallpaper, Screen Saver, Power On Display, Power Off Display, Main menu effect, Show Date and Time, LCD backlight

**Wallpaper** You can set your phone to display a background picture, when the phone is in Idle mode.

**Screen saver:** You can set your phone to **Screen saver** picture, when the phone is in Idle mode.

**Power on display:** You can set your **Power on display** picture

**Power off display:** You can set your **Power off display** picture

**Main menu effect:** You can set your **Main menu effect**

**Show date and time:** You can select On or Off.

### 13.2.6 Greeting text

You can set Status On / Off, and edit Greeting Text contents.

### 13.2.7 Auto up date of date and time

You can select On or off

### 13.2.8 Light led

You can select On or off

### 13.2.9 LCD backlight

Press left or right key to set Brightness or time in LCD backlight interface

## 13.3 Network settings

You can set SIM1 network settings and SIM2 network settings.

**Network selection:** You can select New search, select network and selection mode.

**Preferences:** You can select the network you will preference.

## 13.4 Security settings

### 13.4.1 Security settings

**SIM1 Lock:** Set SIM Lock to On or Off need Enter PIN code.

**On:** To activate the PIN, the phone request the code each time the phone is switched on.

**Off:** To switch off the PIN.

If you input the wrong PIN code for thrice that the phone will request to input the PUK code. If the PUK code is not provided, please contact your network operator.

**Change Password:** You can change the SIM1 PIN Code, SIM2 PIN2 Code.

### 13.4.2 Phone Lock

If you set On that the phone will request the password each time the phone is switched on. The default is Off. Set On or Off need enter password. The factory setting for the lock code is 0000

**On:** Select On, the phone will request the password each time the phone is switched on.

**Off:** Select Off, the phone will not request the password each time the phone is switched on.

### 13.4.3 Auto Keypad Lock

You can set Auto Keypad Lock None, 5 sec., 30 sec., 1 min. or 5 min.

### 13.4.4 Change Password

You can change the Phone Lock password. and Mobile Tracker Password

## 13.5 Restore Factory Settings

You can select OK to restore the settings. The phone will request to input the password. The factory setting for the lock code is 0000

## 13.6 Sound effects

You can select Normal, Bass, Dance, Classical, Treble, Party, Pop, Rock

# 14. Organizer

## 14.1. Calculator

In the idle, select [Menu->Extra->Calculator] .

You can press the keypad to operate too.

**Press “Up” and “Down” Key:** To enter “+” “-” “×” “/” .

“#” Key: To enter “.”

**Left soft Key:** To enter “=”.

**Right Soft Key:** To clear the input character one by one.

## 14.2. Calendar

You can view calendar, press the left soft key “Option” to View, View all ,Add event, Delete event, Jump to date, Go to today ,Go to weekly view, Indian calendar, Onscreen display

**View:** You can view tasks list or add tasks.

**View all:** You can view all tasks list or add tasks

**Add event:** You can add new tasks.

**Delete event:** You can delete event

**Jump To Date:** Input date to jump to date.

**Go to today:** Input date today

**Go to weekly view:** You can switch go to monthly view and go to weekly view.

## 14.3. Tasks

You can view tasks list or add tasks.

## 14.4 Alarm

In the idle, select [Menu->Organizer->Alarm] to display the menu: You can set 5 Alarm..

In the Edit Alarm interface, you can set On or Off, Time , Repeat, snooze and Alert type.

## 14.5 World Clock

In idle, select [Menu->Organizer-World clock] to view the time about many countries in the world. Press the Left key or the Right Key to switch the different cities.

You can set On or Off.

## 14.6 Unit converter

**Weight:** Switch Weight Proportion in weight interface, input KG then press ok ,it can Calculate pound

**Length:** Switch Length Proportion in weight interface, input KM then press ok, it can

Mile

## 14.7 Currency converter

Input Rate in Currency converter interface, then Press ok .Press right left key to switch Proportion,input number in Local,it will Calculate foreign coin in Foreign.

## 14.8 Stopwatch

**Typical Stopwatch:** Contains Split timing and Lap timing, When you select View records you can view the records which you make

**nWay Stopwatch :** press Ok key to start , then press up .down .left .right key to

record up. Down .left right time.

## 14.9 Fun & Games

In the idle, select [Menu->Organizer->Fun&Games] to display the menu: Games

### 14.9.1 Games

In the idle, select [Menu->Fun&Games->Games] to display the game list.

In the game list interface, select a game to set: Start Game, Game Level, Best Grades, Help.

**Start Game:** To play game.

**Game Level:** You can select Game Level.

**Best Grades:** You can view the best grades.

**Help:** Display the introduction about how to play the game. If the game has not end, you can select Resume to continue the game.

**Game Setting :** You can set On or Off of the BGM, Sound Effect, Game Vibration, Volume.

## 14.10 File Manager

Insert memory card, you may create folder to manage files. In the File Manager interface, the phone will display Total capacity and Freecapacity of the memorizer.

Press the left soft key “Option”, you can Open, Create Folder, Format.

## 15. Services

In the idle, select Services.

Check the availability of services with your network operator or service provider.

### 15.1 Bluetooth

In the idle, select [Menu->Organizer->Bluetooth]:

**Power:** To power on the Bluetooth.

**Visibility:** Set the Bluetooth. Device is Visibilited by other Bluetooth

**My Device:** Select Option to Inquiry New Device.

**Search audio device:** To search for devices within range, and then you need input the postcode.

**My name:** display the Bluetooth Name

**Advanced:** it contain Audio path, Storage, Sharing, permission, My address sub menu

**Audio path:** To set Leave in Phone or Forward to BT Headset;

**Storage:** To select Phone or Memory card or always ask

**Sharing permission:** To select Full control or Read only

**My address:** Display Bluetooth address

**△ Notices:** The connection can be subject to interference from obstructions such as walls or from other electronic devices

### 15.2 Internet service

In the idle, select [Services->WAP Browser] to operate:

**Homepage:** You can access the homepage.

**Bookmarks:** To display the bookmark, you can select Goto, Edit, Send, Delete, Delete All, Add Bookmark.

**Recent Pages:** To view recent pages.

**Input address:** To enter address

**Input address:** To enter address.

**Service Inbox:** To view the service inbox.

**Setting:** You can set Select SIM, Profiles, Browser Options, Service Message Settings, Clear Cache, Clear Cookies.

## 15.3 Data Account

In the idle, select [Services->Data Account]: you can view or edit you data account.

# 16. Appendix

## 16.1 Basic Spec

Network: GSM 900/1800 /1900

Dimension: 100.5\*50.2\*20.0mm

Battery: 1080mAh

Waiting time: about 200 ~ 300hours\*

Talktime: about 3 ~ 5 hours\*

\*Variation in operation times may occur depending on SIM card, network, and usage settings, usage style and environments.

## 16.2 Care and Maintenance

### 16.2.1 Battery and Charger Safety

1. Only use batteries approved by the phone manufacturer.
2. Your device is powered by a rechargeable battery. The full performance of a new battery is achieved only after two or three complete charge and discharge cycles.
3. The charging time depends on the charger and the battery used.
4. The battery can be charged and discharged hundreds of times, but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, replace the battery.
5. If unused, a fully charged battery will lose its charge.
6. When the charger is not disconnecting it from the power source. Do not leave the battery connected to the charger and power source for longer then necessary as overcharging it will shorten its life.
7. Leaving the battery in hot or cold place, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery. A device with a hot or cold battery may not work temporarily, even when the battery is fully charged. Battery performance is particularly limited in temperatures well below freezing.
8. Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object causes a direct connection between the + and – terminals of the battery. Short-circuiting the terminals may damage the battery or the connecting object.
9. Do not dispose of the battery in a fire.

### 16.2.2 Phone Maintenance

Your device is a product of superior design and chairmanship and should be treated with care. The suggestions below will help you protect your warranty coverage.

1. Keep the phone and all the parts and accessories (for example, SIM card) out of the reach of small children.
2. Do not use or store the phone in dusty or dirty locations. Its moving parts and electronic components can be damaged

Electronic components can be damaged.

3. Do not use or store the phone in excessively hot places. High temperatures will shorten the life-span of the phone, damage the battery, and warp or melt the plastic used in the phone's manufacture.
4. Do not store the phone in excessively cold places. When the phone returns to its normal temperature, moisture can form inside the phone, causing damage to the electronic circuits.
5. Do not mishandle or abuse the phone. Dropping, knocking or shaking it can damage the internal circuits.
6. Do not use harsh chemicals, strong detergents, or cleaning solvents to clean the phone. If you must clean it, then use a soft, clean and dry cloth.
7. Do not paint the phone. Paint can clog the moving parts and prevent proper operation.
8. Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the device and may violate regulations governing radio devices.
9. If the phone or any of the accessories are not working as they should, please consult your dealer who can provide you with the expert assistance required.

All of the above suggestions apply equally to your device, battery, charger, or any enhancement. If any device is not working properly, take it to the nearest authorized service facility for service.

### 16.3FAQ

If your phone appears the questions frequently, please refer to the answers as follows. After that, you cannot solve the questions, please contact with the mobile phone dealers or service provider.

Trouble	Possible reasons
The phone cannot be switched on	<ol style="list-style-type: none"> <li>1. Is there any power in the battery?</li> <li>2. Is the battery installed properly?</li> </ol>
Battery cannot be charged	<ol style="list-style-type: none"> <li>1. Check if the charger is connected with the phone correctly.</li> <li>2. Is the battery usable? The performance of the battery will be reduced after used for several years.</li> <li>3. Is the battery completely discharged? The phone needs to be connected to the charger for a while before it can be charged.</li> </ol>
Fails to register to the network	<ol style="list-style-type: none"> <li>1. The signal is too weak, or there may be some radio interference around. Check the signal strength meter on the screen to see whether vertical lines are displayed.</li> <li>2. Is the SIM card installed properly, poorly contacted or damaged? If the SIM card is damaged, please ask your network operator for replacement.</li> </ol>
Cannot call out	<ol style="list-style-type: none"> <li>1. Is the SIM card registered in the network?</li> <li>2. Is call barring enabled?</li> <li>3. Calling prohibited due to call charges not paid?</li> <li>4. Have you enabled the function of FDN?</li> <li>5. Have you selected line 2 though your network operator doesn't provide this service?</li> </ol>
	<ol style="list-style-type: none"> <li>1. Is the SIM card registered in the network?</li> </ol>

Cannot call in	2. Incoming call prohibited due to call charges not paid? 3. Is call diverting enabled? 4. Is the "Bar incoming call" function in call barring enabled?
PIN locked	Input the PUK code supplied with the SIM card to unlock or contact the network operator.
Call charge meter invalid	No metering pulse is transmitted. Please contact your network operator.
SIM error	1. SIM card is dirty. Clean it. 2. Reinstall the SIM card. 3. SIM card is damaged. Replace it.

## **Appendix II Abbreviations and explanations**

**GSM** Global System of Mobile Communication.

**SIM** Subscriber Identity Module.

**PIN** Personal Identity Number. Usually refers to PIN1. Supplied with SIM card. Used to unlock the SIM card.

**PUK** Personal Unlock Code. Supplied with SIM card. It is used to unlock the SIM card if you input wrong PIN code three times consecutively and the SIM card is locked. You can also use it to modify PIN code.

### **16.4 Caution**

Our company will not take any responsibility for result caused by not following the above suggestion or by improper use.

If the above content in this manual is not accordance with your mobile phone, please subject to your mobile phone.

Our company has the right to subject to amendment without notice.